

How to fit? **Roller blinds**

You will need:

- A drill with correct bit
- A crossheaded screwdriver
- A metal tape measure
- A pencil

You should have:

x1 Plunger end bracket



x1 Control end bracket



x 4 Wood screws only



Your brackets are packed separately in the box. Please ensure you've located them before disposing of the packaging.

The brackets are a universal type that can be used to top fix the blind into a recess or face fix into a frame or a wall.

Please read the following instructions carefully before you start fitting your blind.

1. Fix the brackets

- The brackets differ in appearance. Ensure you fit the Plunger End bracket on same side the blind as the plunger end.
- Locate the measuring points you used to calculate the width of the blind. You may be able to use the blind as a template.
- Ensure the brackets are positioned a suitable distance away from any window handles or obstructions to allow the blind to operate smoothly.
- Make sure you allow the correct amount of space for the blind to fit snugly between the brackets.
- Hold a bracket in position and mark where the screws will go, using the relevant holes in the bracket as a guide.
- If you're fitting to a wall or lintel, use a drill with the suitable sized bit to make your holes, and push in wallplugs.
- If you're fitting into a wooden frame, screw your brackets into position. You may want to make pilot holes to allow easier fixing of the screws.
- Fix the bracket into place and repeat on the other side of the blind.

2. Fit the blind

- With the blind wound up, push the plunger end into the hole on the side of bracket.
- Slide the control side of the blind (where either the spring or chain control is located) onto the Control End bracket.



3. Chain breaker

All roller blind chains at WeLoveBlinds can be supplied with easy-break connectors. **But how do they work?**

- It's pretty simple: Two clear plastic connectors are attached to the blind chain itself. When 6kg of pressure is applied to the chain, as the name suggests, the easy-break connectors break easily in order to avoid the entanglement and / or strangulation of children.
- Roller blind chains do not require much force to be broken. If a child should trip and fall into the loop of a roller blind chain, the force exerted will be enough to break it completely, further reducing the risk of strangulation.
- The roller blind chain must be no lower than 600mm off the floor. Anything below 600mm in in-reach of children and therefore poses a greater risk to their health and safety.



Operating your blind:

- There are two controls that will operate the blind - a tilt control and a raise lower control.
- To raise the blind, pull the cord down until the blind is at the height you want and lock into place by moving the cords across the blind.
- To lower the blind, release the cord by moving them away from the blind, then let the cord slide through your fingers.
- Slats should be open when raising or lowering the blind.
- To adjust the angle of the slats, operate the tilt control cords as required.



Safety tips:

- Move beds, cots and furniture away from the window.
- Do not let cords or chains hang loose. Make sure they are kept out of reach of children at all times.
- Do not tie loose cords and chains together.
- Check the condition of all safety devices if not used regularly and replace if the device is faulty.

Warning

- Blinds can be potentially dangerous to small children. Please be aware that swallowing small parts can cause internal asphyxiation. Looped or low hanging cords, chains or tapes can create hazardous loops which could lead to the risk of strangulation. We do everything we can to ensure your chosen product is child safe. As a minimum all of our blinds meet the European Standard BS EN 13120 for safety. Our instructions and the supplied Child Safety device(s) are intended for you to ensure that your blind is as safe as possible.
- The information below gives guidance for fitting the provided child safety devices. All safety devices must be correctly installed for the protection from strangulation of young children and the proper use of the blind. Please read the instructions carefully and keep safe for future reference.
- Only use the devices and cords provided with your blind. Videos showing how to fit and reconnect child safety devices are available, along with replacements at: **www.makeitchildsafe.co.uk**.



Got a question that we haven't already answered?
Get in touch with us by sending an email to **sales@weloveblinds.com**
or call us on **0800 009 2959** and we'll be happy to help!

